


AXOON

Assembly Manual

Electric Height Adjustable Desk

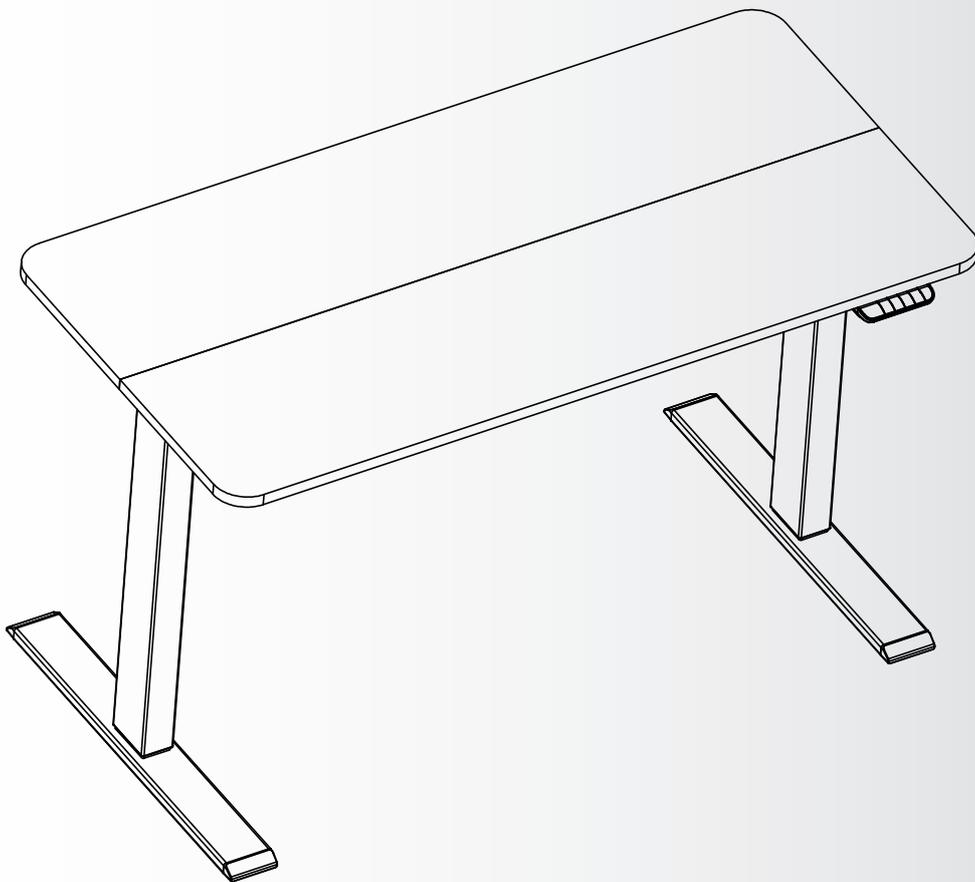

AX1TB126 | ESSENTIAL GAMING DESK

Please read this manual carefully before any operation and keep it properly for future use.



Warnings



Keep children and pets away from the product during table lifting operation. Unplug the product in lightening weather and when it will be unused for a long time.



Keep proper distance between the table and the wall.



Keep obstacles away in the running process of the table, and there should be no obstacles higher than 500mm under the table.



Better keep environment temperature 0~40°C, the product is far away from corrosive gases, liquids and duty objects.



To avoid malfunction and harm to human body, it is strictly prohibited to disassembly the product without instruction.



Please read the operation instructions carefully before using the product. We do not assume any responsibility for the damage of the product or human injury caused by abnormal operation.



Reset manually after first use or power off.

CONTACT US

 
If you have any problems or concerns about your purchase, please get in touch with our customer service () as soon as possible and we will do everything we can to help.

You will be highly appreciated if you can put your order number in the email title so that we can deal with it efficiently.


Components List

15min

Assembly Time



Two People

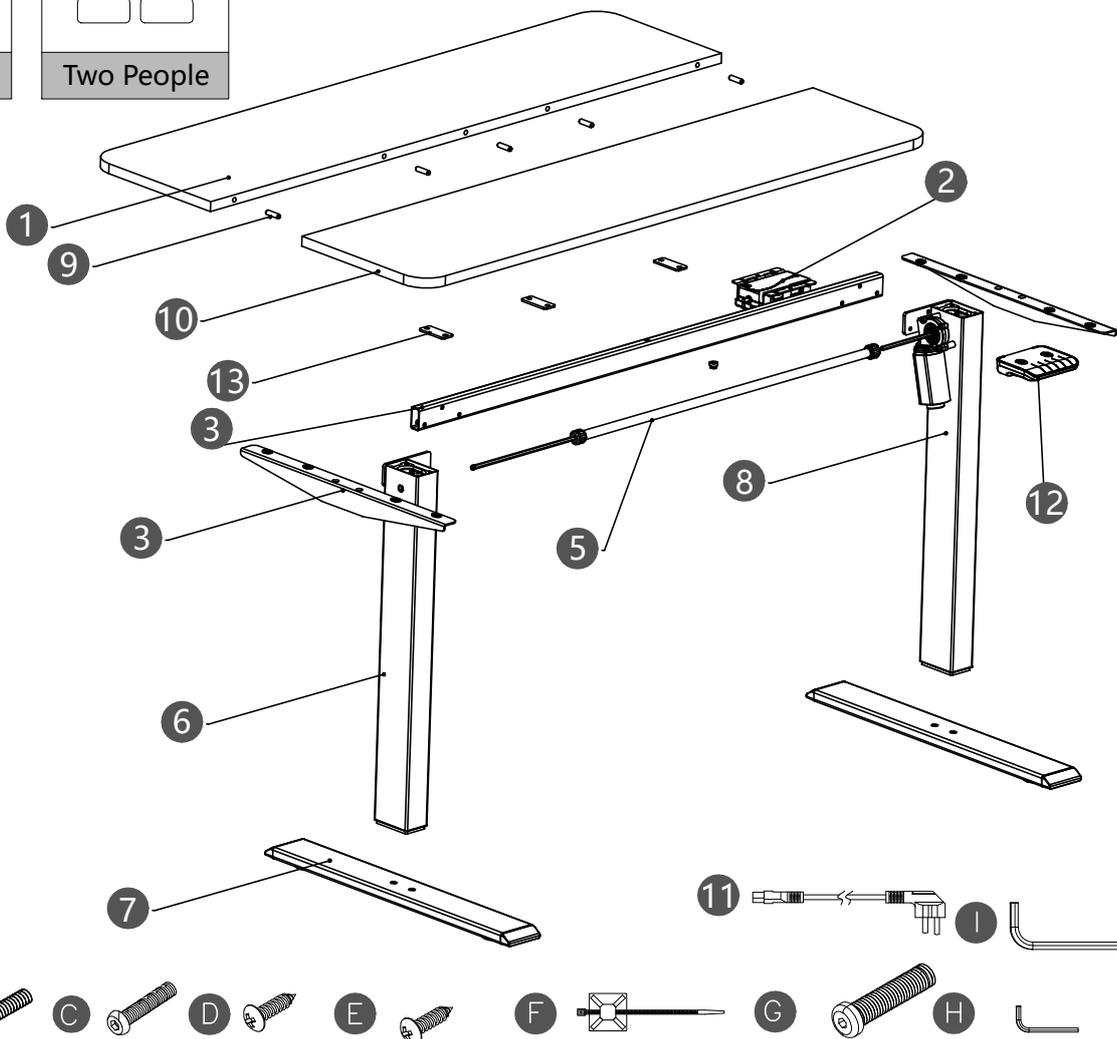


No.	Component	PCS
1	Table One	1
2	Adapter	1
3	Cross Bar	1
4	Side Bar	2
5	Drive Rod	1
6	Lift Foot without a Motor	1
7	Ground Feet	2
8	Lift Foot with a Motor	1
9	Wooden Pin	5
10	Table Two	1
11	Power Cable	1

No.	Component	PCS
12	Deluxe Hand Controller	1
13	Table Connector	3
A	Round-head Screws(M6*12)	10
B	Screws(M6*20)	4
C	Screws(M6*25)	6
D	Screws(ST4.2*16)	2
E	Screws(ST5*16)	6
F	Cable Tie	2
G	Screws(M10*35)	4
H	Allen Key (4#)	1
I	Allen Key (6#)	1

Assembly Instruction


STEP 1

Connect lift feet(8 & 6) to cross bar(3) with screws(M6*25)(C) using 4# Allen Key(H).

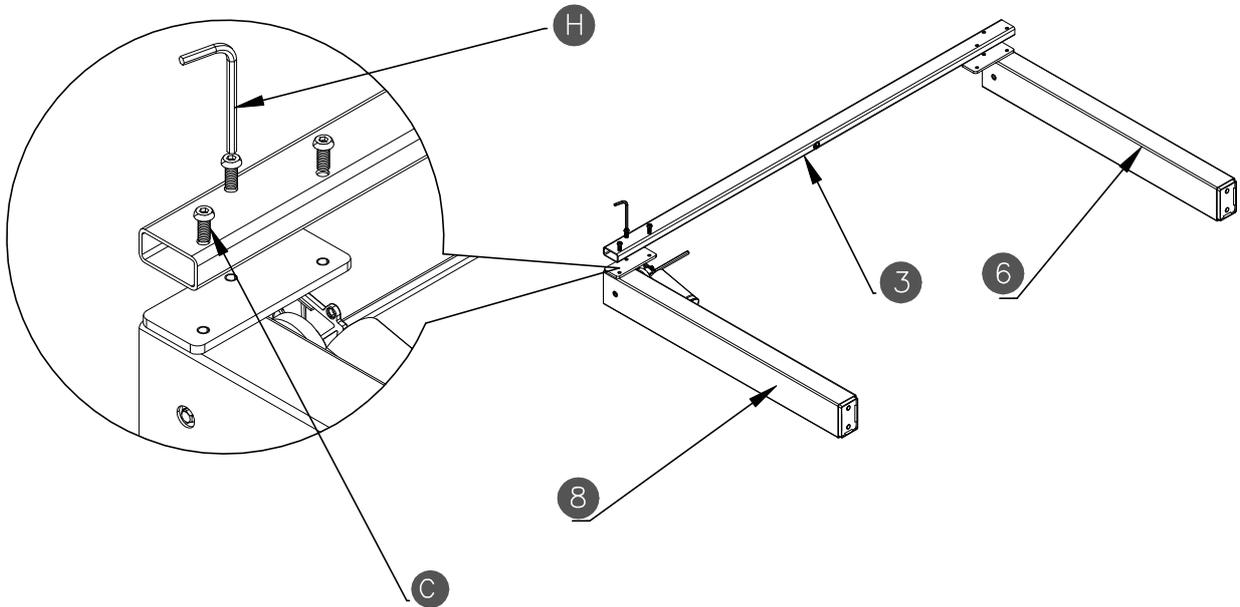

STEP 2


Connect drive rod(5) to lift feet. Untighten the cover on the drive rod and make sure the side with the raised dots outward, put the rod through the lift foot without motor. After that, tighten the plastic cover.

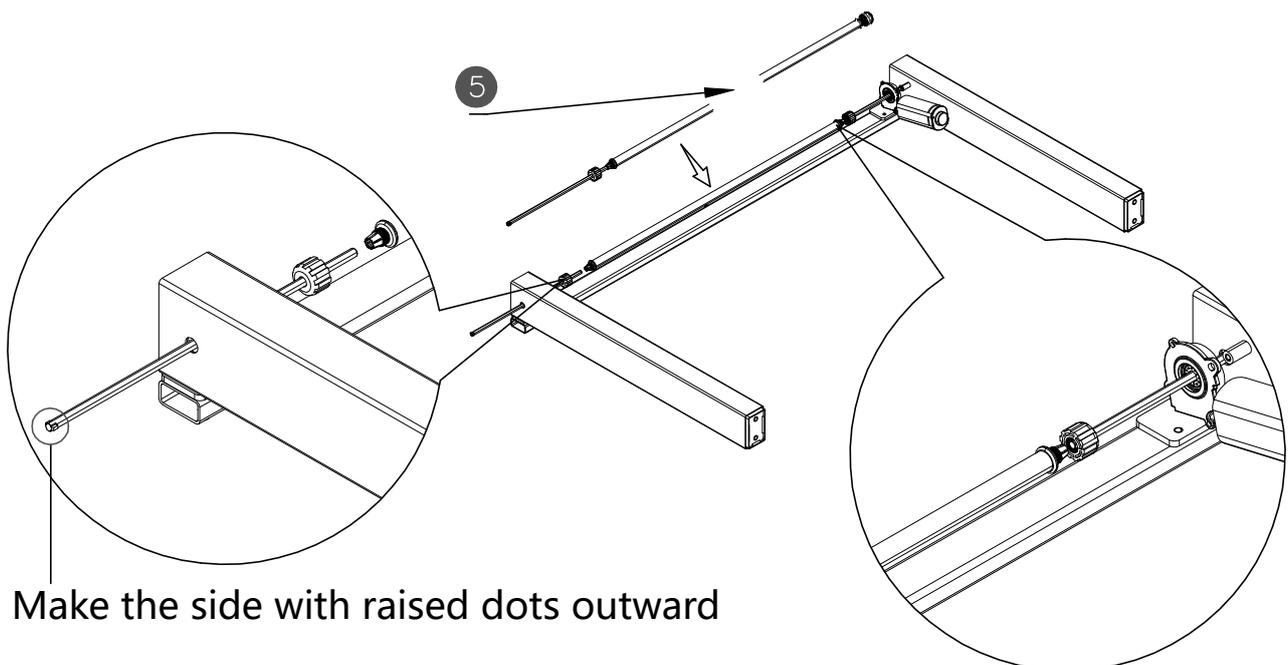

Assembly Instruction


STEP 3

Connect ground feet(7) to lift feet with screws(M10*35)(G) using 6# Allen Key(I).

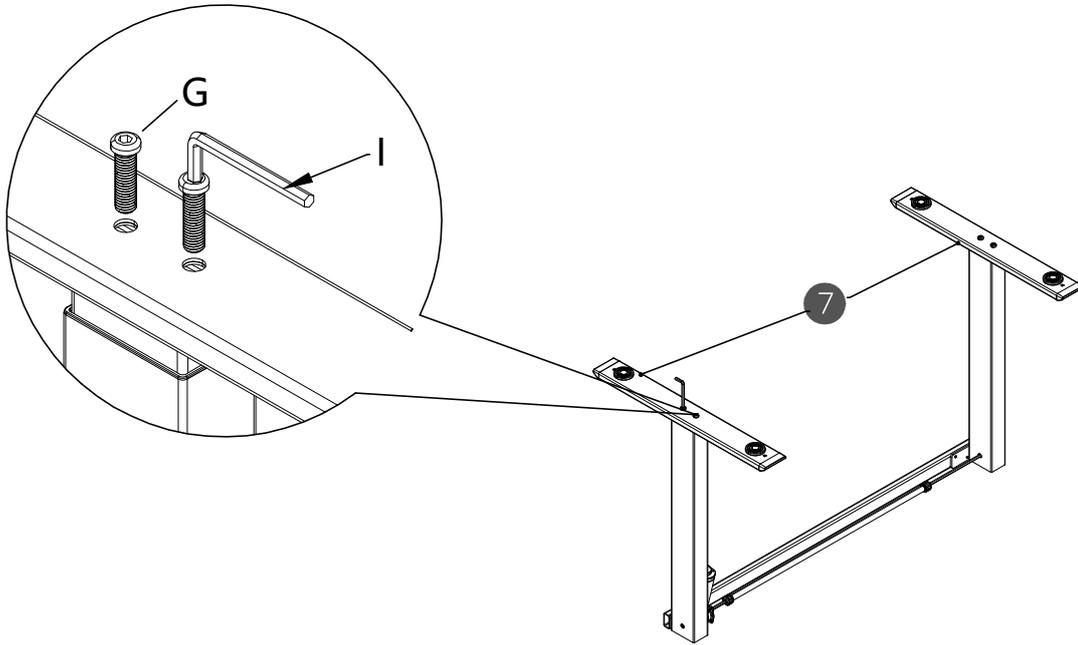

STEP 4


Connect side bars(4) to lift feet with screws(M6*20)(B) using 4# Allen Key(H).

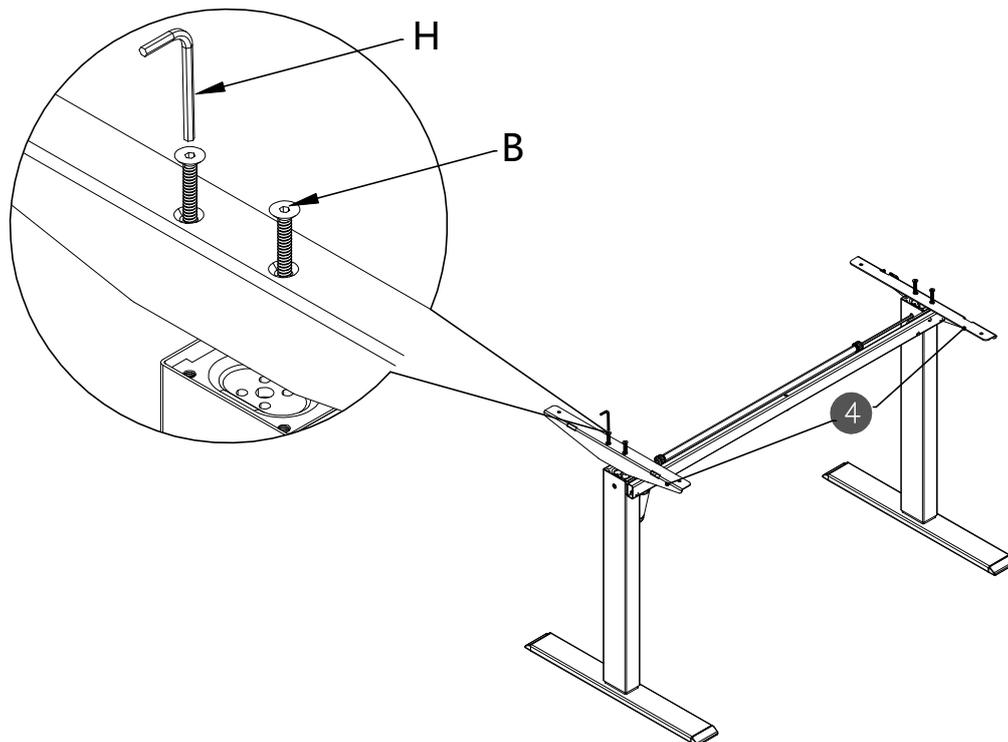

Assembly Instruction


STEP 5

Connect table one(1) and table two(10) with wooden pin(9) and table connector(13) using screws(ST5*16)(E).

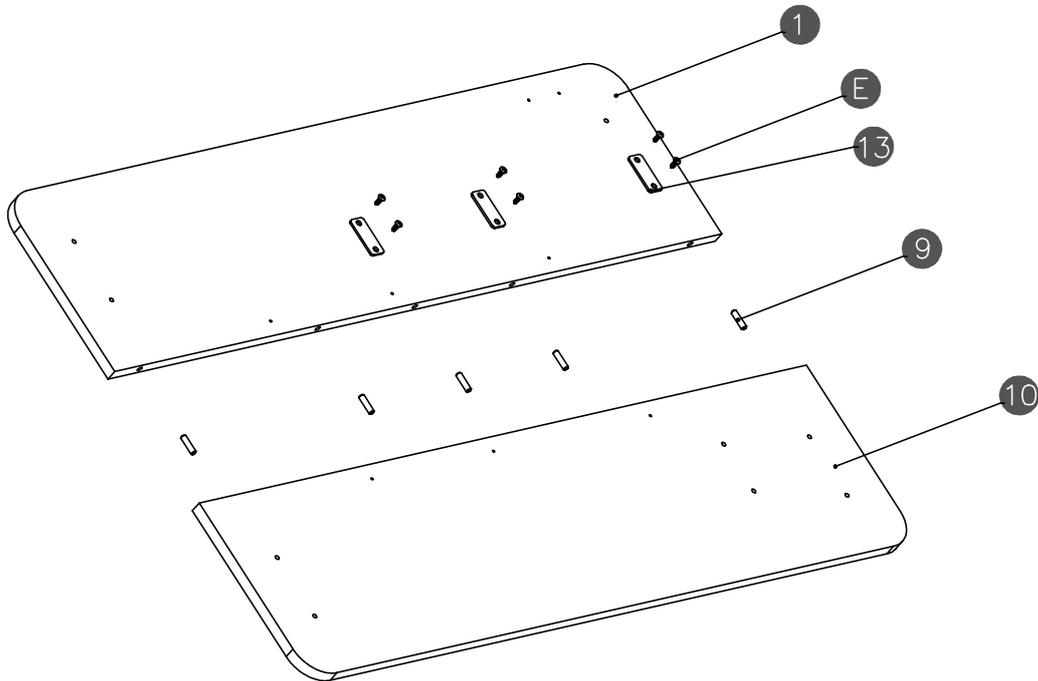

STEP 6

Place the frame to the backside of table top with screws(M6*12)(A).

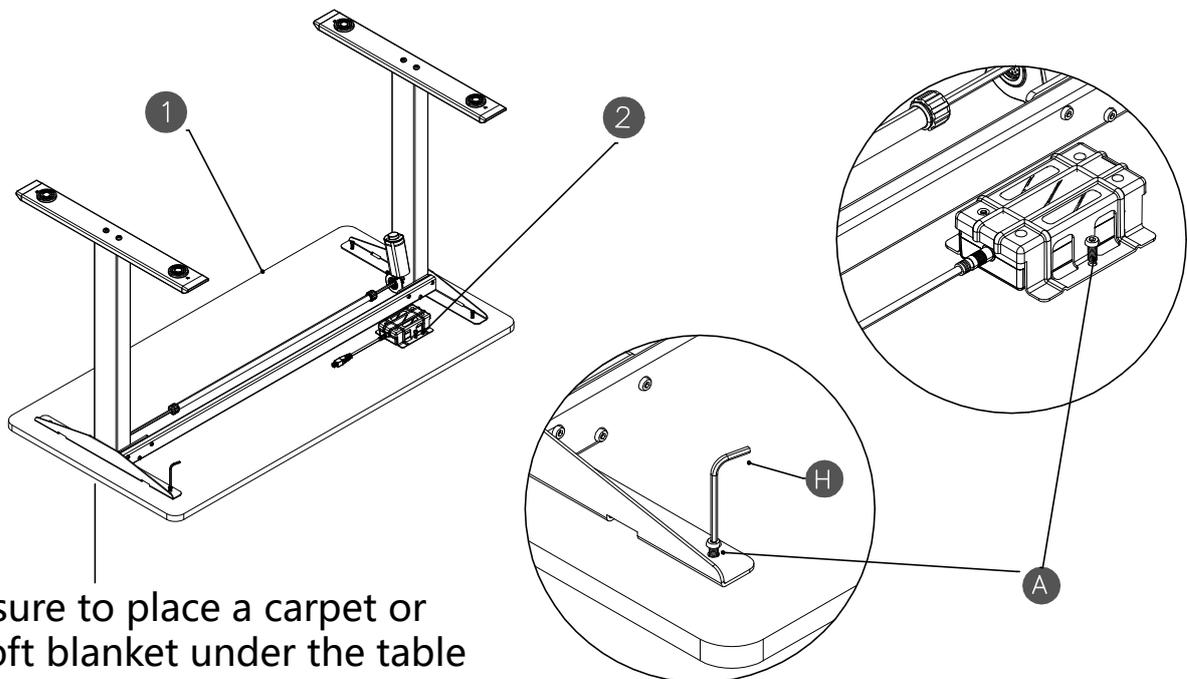


Be sure to place a carpet or a soft blanket under the table top in case any scratches!

Assembly Instruction


STEP 7

Assemble hand controller(12) with screws(ST4.2*16) to the backside of table top.

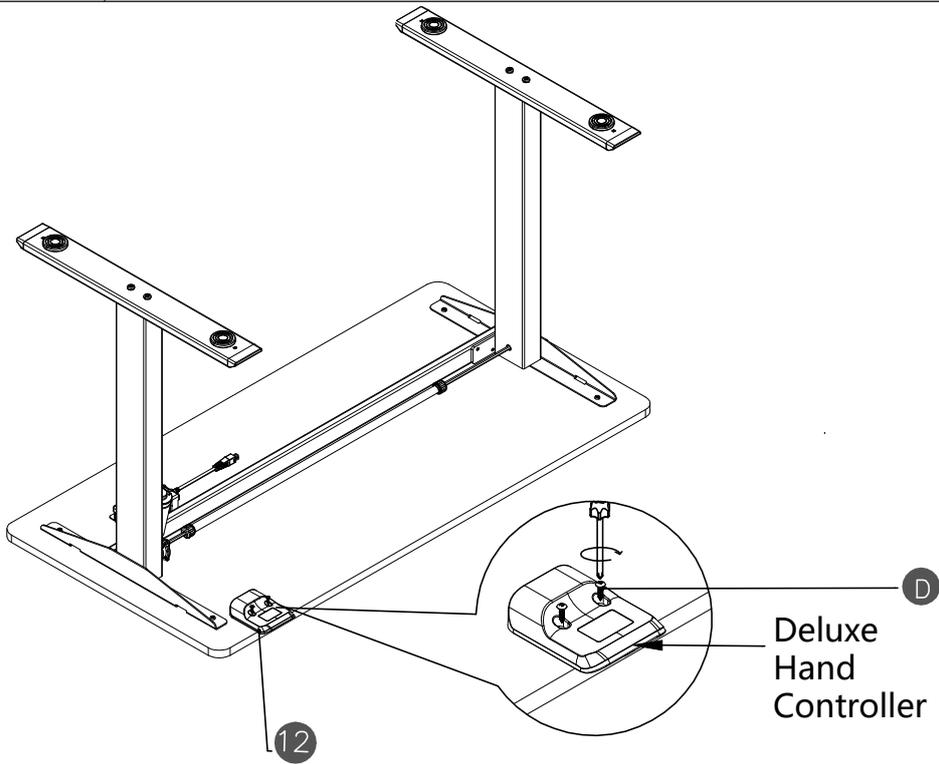


STEP 8

Connect components as shown in the picture. Organize the cords with a cable tie(F).

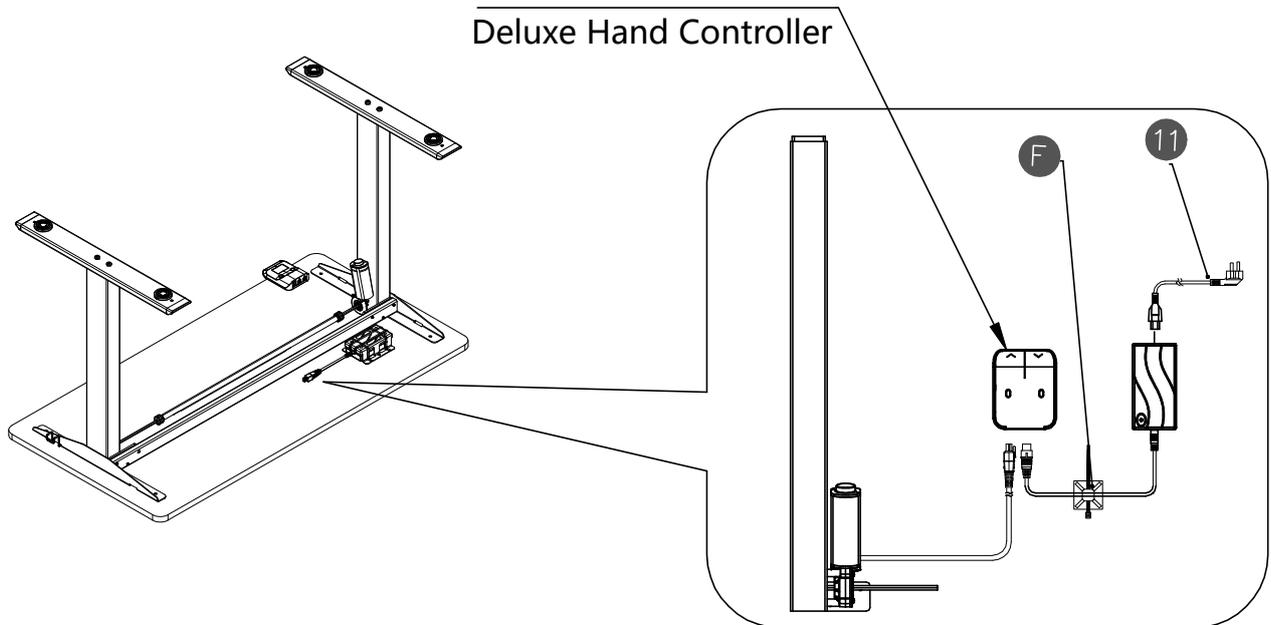

Instruction for Deluxe Hand Controller

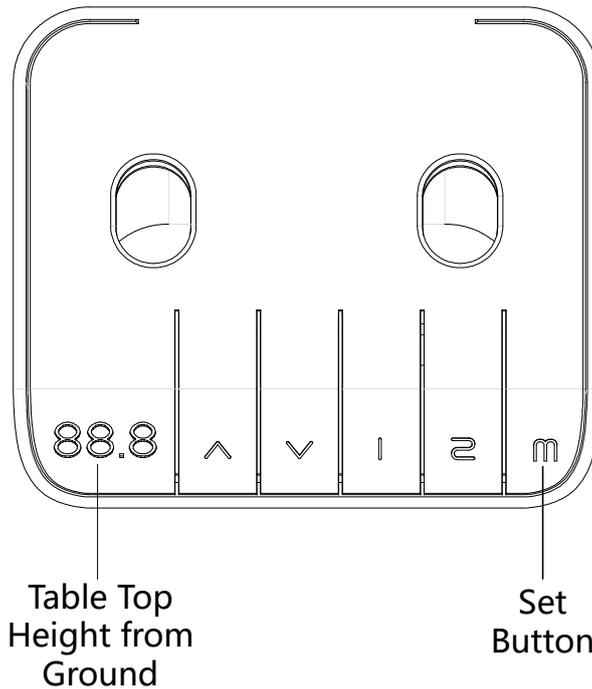


Please ensure that wires are long enough for the table to move up and down.



It is recommended to preset the most comfortable sitting height as 1, and the most comfortable standing height as 2.

Restoration Malfunction Solution

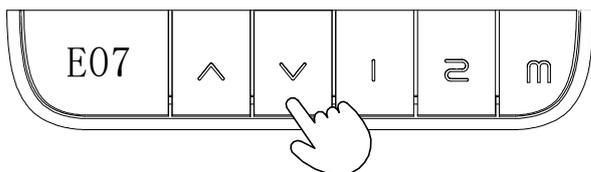


Malfunction

The digital tube displays E07-E09 after the controller reports an error, and no button reacts to error even after powering off.

Solution

Press the down button for 5 seconds till the digital tube displays RST, and release the button and then press again to reset.


Instruction for Deluxe Hand Controller

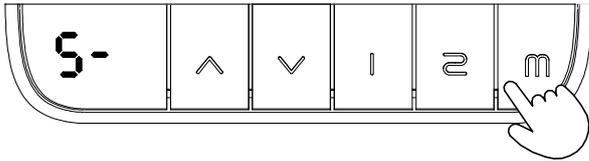

Press and hold for 8 seconds.


Lock the controller

Press button M till the digital tube displays "S-" ; press M and hold for 5 seconds to turn the digital tube into number display, and hold for another 3 seconds till the digital tube displays "LOC" .

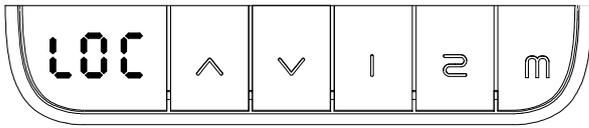

Unlock the controller


Press button M and hold for 8 seconds in the "LOC" state, and the digital tube display numbers to unlock the controller.

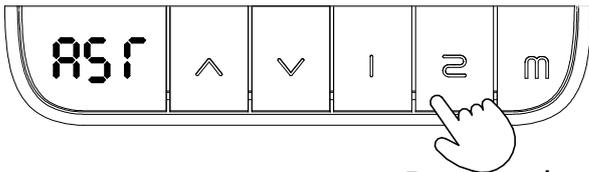

Press and hold for 5 seconds.

cm/inch switch


In the rest state in which the digital tube displays "RST" , press the button "2" and hold for 5 seconds to switch between inch (" 10.4" is displayed) and cm(" 10.3" is displayed).

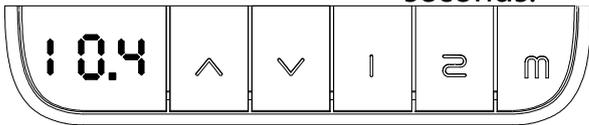


Sensitivity of Anti-collision

In the reset state, hold the up arrow button for 5 seconds to change sensitivity of anti-collision, here are 3 options when display below digits:

- "10.5" - High sensitive
- "10.6" - Medium sensitive
- "10.7" - Low sensitive

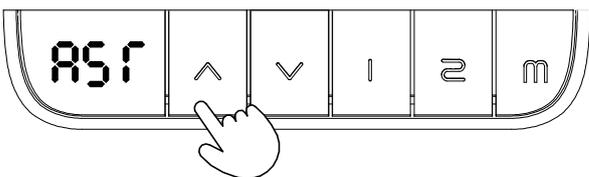

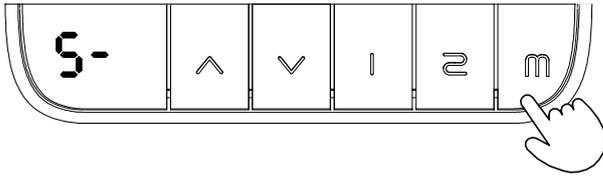

Memory height setting

Adjust the table to an expected height; press M till the digital tube displays "S-" and press one button between 1 or 2 to memorize the height. After that, if you press one of them, the table will go to the preset height.

Other malfunctions and solutions

1. Reset the controller if following malfunctions appear.

- Abnormal operation;
- The controller displays RES (Reset);
- The controller displays "E07" or "E08" , but the motor drive cable is connected normally.

2. If the digital tube displays "HOT" (" hot"), power off and cool for 20 minutes.

